


Batten layout - around an opening

#007.22.01

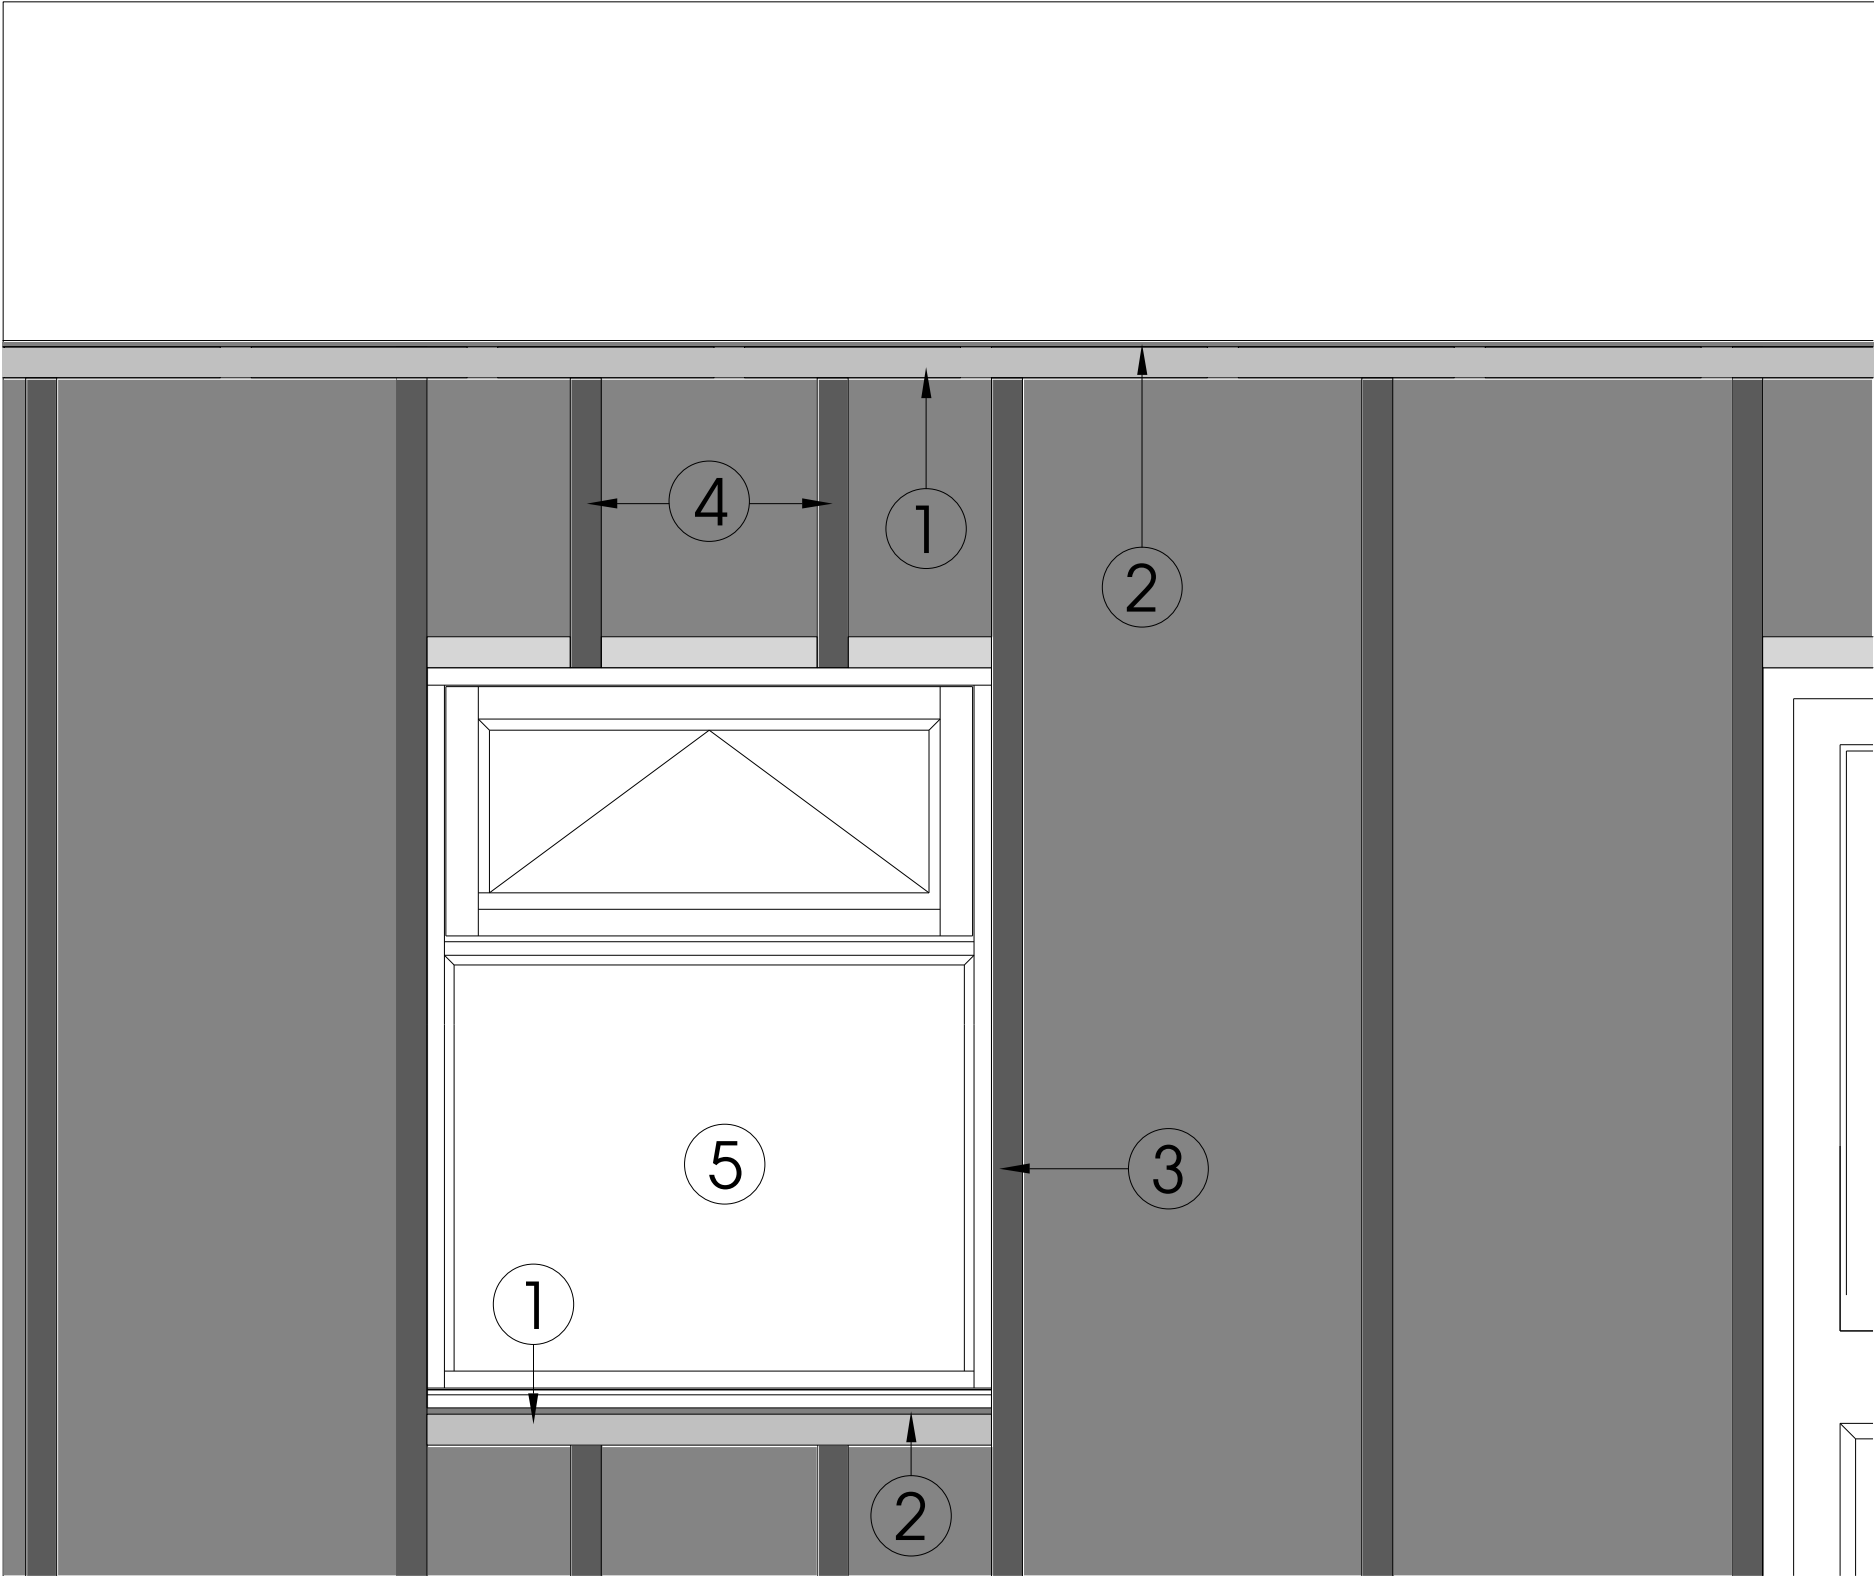

1 - Perforated Closure
2 - 10mm Gap
3 - Battens at 600mm centres

4 - Extra Batten support around window
5 - Example window